
























Quick Reference Guide SAMSUNG S5603

Basic Operation











On/Off	Press and hold  until the screen display is turned on/off.
Dialing	<ol style="list-style-type: none"> In idle mode: <ul style="list-style-type: none"> Press  (Dial) and, using the virtual keyboard, enter the desired phone number, including the area code (if you made a mistake, press  to delete). Press  (Contacts) to select the number from the phonebook. To dial, press .
Answer/End a call	To answer a call, press  . To end the call, press  .
Silencing an incoming call	Press and hold the bottom part of the volume key  on the left side of the handset, until the incoming ring is silenced.
Option keys	The option bar at the bottom part of the screen presents different action keys in accordance with the active feature and the phone's operational mode.
Main menu access and selecting actions	<ol style="list-style-type: none"> In idle mode, press Menu to display the main menu. From the displayed menu: <ul style="list-style-type: none"> Press the desired menu to select and display the next menu or the activation screen. Press the option keys at the bottom of the screen in order to perform various options.

Operational Keys

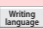 
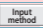 

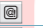 

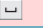 
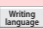 
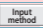 

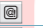 

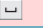 
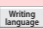 
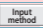 

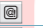 

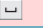 
	<ul style="list-style-type: none"> In idle mode, press to display Call Log (all call types). Scroll through the lists of Missed, Dialled or Received calls, Sent msg. or Received msg.. To dial, select the desired phone number and press .
	<ul style="list-style-type: none"> Press to return to the previous activation screen. Press and hold to display the Switch menu for the following actions: <ul style="list-style-type: none">  Call: Display phone number entry screen.  Music Player: Direct access to the music player's music library.  Messages: Create a new message.  Browser: Connection to the Internet and the service provider's web portal.  Main Menu: Display the main menu.  Back: Exit the switch menu and return to the previous screen display.
	In menu mode, press to quickly return to the main menu screen or to idle mode.
	<ul style="list-style-type: none"> In idle mode, press to change the volume of the keys and/or the vibration response intensity. During a call, press to adjust the receiver volume. When reading a message or surfing the Internet, press to change the displayed font size.
	Activate/cancel touch screen and button lock. Note: The phone lock can also be cancelled by pressing and holding the lock icon on the touch screen.
	In idle mode, press to activate the Camera .

Touch Screen*

Widgets are interactive applications that can be operated and managed from the widget bar or from the phone's idle screen.


Display widget bar	In idle mode, press the tab with the arrow on the bottom left side of the screen, or any available space on screen.
Widget display in idle screen	<ol style="list-style-type: none"> In idle mode, present the widget bar. Using your finger, drag and drop the desired widget to: <ul style="list-style-type: none"> A different location on the bar. The idle screen and drag it to the desired location on the screen. Hide the widget bar.
Using Widgets	Based on the type of widget, manner of activation and state, perform one of the following: <ul style="list-style-type: none"> Drag the widget from the widget bar to an available spot on the activation screen. Press the widget icon on the idle screen. Press the widget icon displayed on the widget bar.
Widgets to control phone features	<ul style="list-style-type: none">  Message inbox: Direct access to Messages → Inbox.  Ringtone: Direct access to sound settings for the active profile.  Profiles: Select the active profile.  Games: Direct access to Applications → Games and More.  Memo: Quick entry of a new memo.  More Widgets: Download and install additional widgets.
Touch screen operating labels	<ul style="list-style-type: none">  Menu: Press to display the main menu.  Create message: Press to create a new message.  Contacts: Press for direct access to the phonebook.  Dial: Press to display the virtual keyboard.

Entering Text

Special feature buttons	When entering text from the virtual keyboard which appears on the phone screen, the following keys shall enable the following actions: <table border="1" data-bbox="233 3488 1010 3765"> <tr> <td></td> <td>Switch entry languages (Hebrew, English and numbers).</td> </tr> <tr> <td></td> <td>Switch entry modes.</td> </tr> <tr> <td></td> <td>Toggle T9 entry mode on/off.</td> </tr> <tr> <td></td> <td>Switch to symbol entry mode.</td> </tr> <tr> <td></td> <td>Delete.</td> </tr> <tr> <td></td> <td>Space bar.</td> </tr> </table>		Switch entry languages (Hebrew, English and numbers).		Switch entry modes.		Toggle T9 entry mode on/off.		Switch to symbol entry mode.		Delete.		Space bar.
	Switch entry languages (Hebrew, English and numbers).												
	Switch entry modes.												
	Toggle T9 entry mode on/off.												
	Switch to symbol entry mode.												
	Delete.												
	Space bar.												
Changing cursor location	Change the location of the cursor in entered text by: <ul style="list-style-type: none"> Pressing at the desired location within the text. Using the navigation tab that appears when you press and hold at the text entry area. Press again to hide the navigation tabs. 												

Messages*

You can send and receive text (SMS) and multimedia (MMS) messages in Hebrew, English, Russian and Arabic. In addition you can add a picture, video clip and/or sound to an MMS message.

Reading multimedia/text messages	<ol style="list-style-type: none"> In idle mode, press the Message inbox widget . Drag your finger along the screen in order to scroll to the desired message and press it.
Sending a Text message (When sending a message exceeding 70 characters in Hebrew and 160 characters in English, the message will be divided into several messages, as necessary, and will be charged accordingly).	<ol style="list-style-type: none"> In idle mode, press Create Message. Press the Press to add recipient tab and select the input source. According to the selected source, enter recipients to the message. Press the message area on screen and, using the virtual keyboard, enter the message and press Done. To send the message, press Send.
Sending a Multimedia message	<ol style="list-style-type: none"> Start by creating a new message as described in Sending a text message. To add the message topic, press More → Add subject and enter the message subject. You will be prompted to confirm changing the message to a multimedia message. To add content to the message, press Add media and add an image, video or sound. To send the message, press Send.

Contacts

Contacts can be saved in the phone contact list in Hebrew, English, Russian and Arabic.

Saving a name and number to memory	<ol style="list-style-type: none"> In idle mode, press Dial. Enter the phone number and press → Add to phonebook → New. Select Phone or SIM. Scroll between the fields and press a field in order to go to entry mode. To save a listing, press Save.
Review contact list	<ol style="list-style-type: none"> In idle mode, press Contacts. Drag your finger along the screen in order to scroll to the required name. To quickly access the name on the list, enter the first letters of the name into the search field at the top. If necessary, drag your finger along the screen in order to scroll to the required name. To rapidly scroll to an area of the list, drag the scroll tab on the right side of the screen until you reach the desired letter. To dial the selected contact, press → or . To display details for the selected contact, press the contact. To send a message to the selected contact, press → .
Reviewing the call log	<ol style="list-style-type: none"> In idle mode, press Menu → Call Log or press . From the menu at the top of the screen, select All, Missed, Dialled, Received, Sent msg. or Received msg. to filter the display appearing on screen.
Setting favorite contacts	<ol style="list-style-type: none"> In idle mode, press Contacts. From the menu on the top of the screen, select Favorites. Press Add and select the contact.

Cellular Internet*

The Internet browser allows you to access and surf the Internet directly from your phone, to view various content and download it to your phone, such as: video clips, MP3 files, games, icons, animations and pictures.

Surfing the Internet	Press Menu → Browser → Home to activate the Internet browser and display the service provider's homepage.
Using the browser	Scroll to the next/previous web page Update page display Back to the home page Display website bookmarks Change display mode Access to browser options

Music Player

Your phone includes a music player for listening to songs (MP3) stored in the phone or on the memory card.

Using the Music player	<ol style="list-style-type: none"> In idle mode, press Menu → Music → Music Player. Select the desired category.
Create a Playlist	<ol style="list-style-type: none"> In idle mode, press Menu → Music → Music Player → Playlists → Create. Press the entry field appearing on screen, using the virtual keyboard, enter the playlist name and press Done → Save.
Add files to a Playlist	<ol style="list-style-type: none"> In idle mode, press Menu → Music → Music Player → All tracks. Press Add to playlist, select the desired songs and press Add. Press the name of the playlist to which you wish to add the selected songs, or press Create to create a new playlist.

Camera

The integrated camera lens (front and back) allows you to take pictures and video clips that will be stored on the phone, and to conduct video conferences. You can send the pictures and video clips that you shot via multimedia messages or e-mail, transfer them via Bluetooth communications or upload them to blog sites on the Internet.

Taking/Sending a picture	<ol style="list-style-type: none"> To activate the camera, press and hold the camera button (on the right side of the phone). Turn the phone to the left, to horizontal position. To set the various shooting options, press the tabs on the side of the screen (Shooting mode, Settings, Flash and Brightness) and define your settings accordingly. To take a picture, press the camera button and then: <ul style="list-style-type: none"> Press the Send via tab (top right) to send the photo in a Message, Email or transfer it through Bluetooth communications. Press the Options tab (bottom left) to define the picture as Wallpaper for the phone display or Caller ID for a contact, to display a Slide Show of pictures taken, to edit the picture or to display picture details. Press the Internet upload tab (center right) to upload the picture to preferred sharing sites that have been defined. Press the delete tab to delete the picture.
Recording/Sending a video clip	<ol style="list-style-type: none"> To activate the camera, press and hold the camera button (on the right side of the phone). Turn the phone to the left, to horizontal position. To shift from still to video shooting, press (Mode) and select (Camcorder). To define the various shooting options, press the tabs on the side of the screen (Recording mode, Settings, Flash and Brightness) and define your settings accordingly. To begin recording, press . To end the recording, press , again or on the touch screen. (The recorded clip will be automatically saved).
Switch between photography modes	<ol style="list-style-type: none"> Activate the camera. Press the Shooting Mode tab (central left) and select the desired photography mode (Single, Smile shot, Continuous or Panorama). To take a picture/pictures, press the camera button .

Ringtone and Display Features

Setting audio volume	During the call, press the volume control button on the left side of the phone.
Setting phone sounds for the profile	<ol style="list-style-type: none"> In idle mode, press Menu → Settings → Phone profiles. Drag your finger along the screen to scroll to the desired profile. <ul style="list-style-type: none"> Press the desired profile to allocate it to the phone. Press to edit the selected profile.
Setting the display language	<ol style="list-style-type: none"> In idle mode, press Menu → Settings → Phone settings → Language. Press Screen text, select the desired language and press Save.
Setting time and/or date	<ol style="list-style-type: none"> In idle mode, press Menu → Settings → Time and Date. Change the settings in the desired fields and press Save.
Alarm clock	<ol style="list-style-type: none"> In idle mode, press Menu → Alarms → Create alarm. Set the required details in the alarm fields. To save the alarm, press Save.

Operating Tips...

Using the touch screen	In idle mode, the touch screen enables quick activation of the following features: <table border="1"> <tr> <td>Left/Right drag</td> <td>Shift between idle screen displays</td> </tr> <tr> <td>Press (free space on screen)</td> <td>Display/Hide the widget bar</td> </tr> </table>	Left/Right drag	Shift between idle screen displays	Press (free space on screen)	Display/Hide the widget bar
Left/Right drag	Shift between idle screen displays				
Press (free space on screen)	Display/Hide the widget bar				
Using widgets	<ul style="list-style-type: none"> Many widgets can be activated directly from the tool bar, without dragging them to the center of the screen. Scrolling the idle screen right/left provides room for many widgets, without them overlapping each other. 				
Smart lock	The phone lock can be released by drawing a selected letter on screen. Accessing Menu → Settings → Smart unlock will enable you to select the letters that will: <ul style="list-style-type: none"> Release the phone lock Release the phone lock and quick dial to a phone number that you specified Release the phone lock and automatically activate an application that you specified 				
Using the motion sensor	<ul style="list-style-type: none"> Turning the phone from horizontal to vertical position, or vice versa, while displaying pictures, video clips or surfing the Internet, will rotate the screen display accordingly. In the Picture Browser application, leaning the phone right and left allows shifting between the displayed photos. 				
Changing font size	When reading a written message or surfing the Internet, use the volume control buttons to change the displayed font. Note: Font size settings will be saved for the next SMS message that you read.				
Change cursor location in text	When entering an SMS message, press and hold the message area to display a row of navigation tabs with which you can change the location of the entry cursor. Pressing within the message area again will hide the tab row.				